

# USER MANUAL

• **Alpha-Numeric Display Pager** •


**MODEL:** AP-824 / AP-924



**CONTENTS**

Control Buttons.....	1
Features and Functions.....	2-3
LCD Display .....	4
Function Operation.....	5-20
Reading a Message .....	5
Locking Message .....	6
Unlocking Message .....	7
Deleting .....	8
Deleting All .....	9
Moving to memo .....	10
Setting Alert .....	11
Pager Off .....	12
Setting Alarm .....	13
Setting Time And Date .....	14
Setting Scroll .....	15
Reading The Mail Drop.....	16
Moving The Icon .....	17
Reading The Personal Message .	18
Reading The Full Message .....	19
Backlighting / Duplicate .....	20

 
## Backlighting

You can manually activate the backlight at any time by pressing and holding  for three seconds. If no other buttons are pressed, the backlight automatically turns off when the pager returns to the standby mode.

## Duplicate Message

The pager automatically covers by the latest messages if it is received the same message.

## Control Buttons

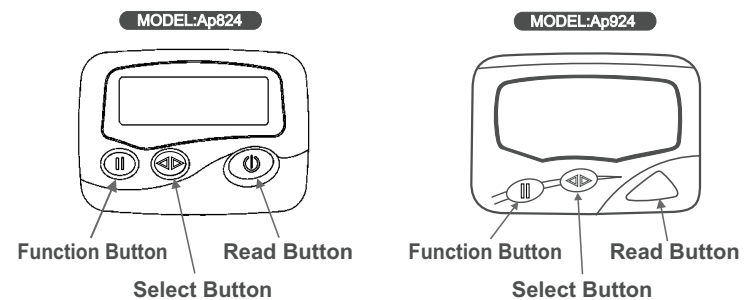

### Read Button

- to read message
- to turn on back-light
- to turn on power
- to activate the function

### Select Button

- to move the cursor
- to read message by cycles



### Function Button

 
 
 
- to display the function menu
- to adjust the time and date change
- to enable the function mode

## 2.Features and Functions

- ∨ 84 English Alpha Character Memory
- ∨ Display Black Light
- ∨ 16 Memory Slots + Message Full 10 sets
- ∨ Personal Message Memory : 10 sets
- ∨ Mail Drop : 10 sets
- ∨ Time .Month. Date. Year Display
- ∨ User Selectable 12 / 24 Hour Clock
- ∨ Message-In Time Indication
- ∨ Incomplete Message-In Indication
- ∨ Manual On / Off operation
- ∨ Unread Message Indicator
- ∨ Duplicate Message Indicator
- ∨ Message Lock
- ∨ All or Individual Message Delete




## Reading Full Message

- \* Press ◀▶, to move the flashing icon to the  symbol.
- \* Press ⏻, to read message.
- \* When the  symbol is shown in the top left-hand corner of the display, indicates the message status as a full message.




### Reading Personal Message

   - \* Press ◀▶, to move the flashing icon to the ☒ symbol.
- \* Press ⏻, to read message.
- \* When the ☒ symbol is shown in the top left-hand corner of the display, indicates the message status as a personal message.



- ∨ Reminder Alerts
- ∨ Message Full Indication
- ∨ Message Full Auto Storage
- ∨ Message Auto Storage to Mail Drop ( User selectable )
- ∨ Display Out Of Service Area
- ∨ Display 5 Daily Alarms Sets
- ∨ 4 Beep Alerts / Silent Vibration / 8 Musical / Sleep Mode
- ∨ Mail Drop Alerts
- ∨ Remain In Memory While Re-place Battery

### LCD Display

 

Pager Status Symbols

- POWER ON
- MUSIC ALERT / BEEP ALERT
- ALARM
- AUTO SCROLL
- OUT OF RANGE
- BATTERY CAPACITY
- MESSAGE FULL

Message Status Symbols





- MESSAGE IN MEMORY
- MESSAGE SELECTING
- MESSAGE LOCK IN MEMORY
- MESSAGE LOCK SELECTING
- PERSONAL MESSAGE
- FULL MESSAGE
- PERSONAL MESSAGE SELECTING
- FULL MESSAGE SELECTING
- MAILDROP IN MEMORY
- MAILDROP SELECTING
- MAILDROP
- ERROR MESSAGE
- DUPLICATE MESSAGE

Function Menu Symbols

- UP OR ESCAPE
- SET ALERT
- PAGER OFF
- SET ALARM
- SET TIME
- SET SCROLL
- LOCK MESSAGE
- UNLOCK MESSAGE
- DELETE
- DELETE ALL
- MOVE TO MEMO




### Moving the icon

    - \* Press **II**, the screen shows " UP OR ESCAPE ".
- \* Press **II** once, the flashing icon can be move to the top row or the second row.
- \* Press **II**, the pager returns to standby mode.






### Reading Mail Drop

   - \* .Press **||** twice , to move the flashing icon in the second row.
- \* .Press **⏏** , to read message or press **◀▶** , to move the icon to the desired message .
- ★ **The features allows 15 sets Mail Drop**



### Receiving And Reading Your Message


 
 
 
- \* A flashing **■** symbol indicates you have a message has not been read Press **◀▶** , to select the message you want to read. The symbol **■** indicates the location of the message. .
- \* Press **⏏** , to display your message.
- \* Press **⏏** once, to view the next screen.
- \* Press **◀▶** once, to view the next message.



- ★ **If you have sat " Auto Scroll " , your pager will scroll through your message , screen by screen automatically .**





### Locking Messages

    - \* Press ◀▶, to move the cursor to the desired flashing symbol. ■.
- \* Press ■■, press ◀▶ once to select the desired message to lock.
- \* Press ■■, to lock the message. .
- \* The symbol ■ is displayed, indicating the status of the message in memory.



### Setting Scroll

  
 
 
- \* Press ■■, then, press ◀▶, to " SET SCROLL " Mode .
- \* Press ■■, to enable scroll automatically.
- \* When "SET SCROLL " displays SPEED : X ( manual scroll ), \_ ( slow ), \_ \_ ( medium ), \_ \_ \_ ( fast ).
- \* Press ■■, receive the confirmation of the request .
- \* Press ◀▶ to activate the function.. .









### Setting The Time And Date

   - \* Press **||** , then , press **◀▶** once until "SET TIME " Mode is displayed.
- \* Press **||** , to enable set time. .
- \* Press **◀▶** , to move the cursor to the hour / minute digit .Then , press **||** to adjust each set of digits : AM/ PM/24 hr / month / day.
- \* Press **⏵** to activate the time and date change.






### Unlocking Messages

    - \* Press **◀▶** , to move the cursor to select the message to unlock.
- \* Press **||** , then , press **◀▶** once, to " MESSAGE UNLOCK " Mode.
- \* Press **||** , to unlock the message.







### Deleting Messages

   - \* Press ◀▶ , to move the cursor to select the message you desire.
- \* Press || , press ◀▶ once , to display " DELETE " Mode.
- \* When " DELETE MESSAGE ? " is displayed on the screen , press || to delete the message.





### Setting The Alarm ( 5 alarms )

    - \* Press || , then , press ◀▶ to "SET ALARM "Mode.
- \* Press || , to enable or disable the alarm.
- \* Press ◀▶ , to move the cursor to set the alarm status either alarm enabled , alarm disabled or set time.
- \* Press ⏴ setting the alarm is completed.




### Turning Your Pager Off

  - \* Press **||** , then , press **◀▶** again to " PAGER OFF " mode.
- \* Press **||** , till " PAGER OFF ? " appears on the screen.
- \* Press **◀▶** , to turn the pager off .
- \* After turning your pager off , the screen is empty.
- \* Press **Ⓛ** , to turn the pager power on.






### Deleting All Messages ( All unlocked and read messages )

 - \* Press **||** , press **◀▶** again , to " DELETE ALL " Mode .
- \* When " DELETE ALL ? " is displayed , Press **||** ,all unlocked and read messages are now deleted.



### Moving Message To Memo

   - \* Press ◀▶, to move the cursor to the desired storing message.
- \* Press ||, and press ◀▶ once, to move to " Move To Memo "
- \* Press ||, to move the flashing icon message automatically into your personal mail .



### Setting The Alert

- \* Press ||, then , press ◀▶ once to display " SET ALERT " Mode .
- \* Press ||, to enable or disable the alarm .
- \* Press ||, to move the cursor to the desired alarm mode .( Alert / Musical / Vibration / Sleep are optional )
- \* Press ◀▶, to move to the cursor to the desired tone or music .
- \* Press ⏻ setting the alert is completed.

